
Quick Start Guide


For Pedestal and Wall Mount chargers

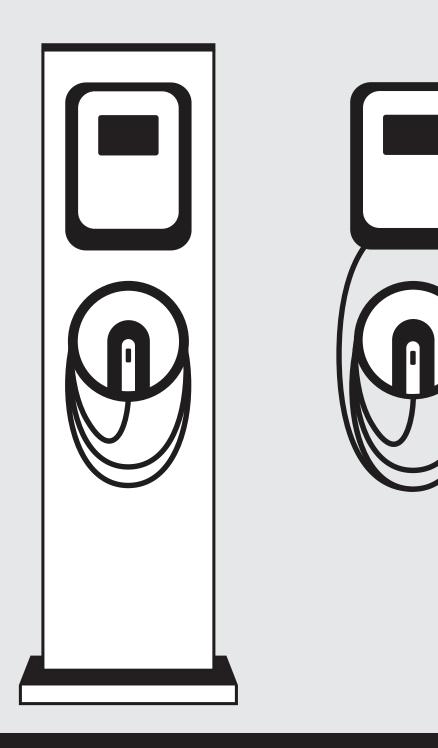




Getting Started

Using your Blink InCard

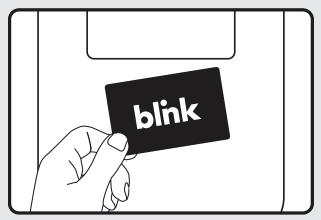

Charging as a Blink Member

Activate any Blink Pedestal or Wall Mount charger by holding your InCard to the reader below the touchscreen. When prompted, enter your billing zip code to verify that you are the authorized user.

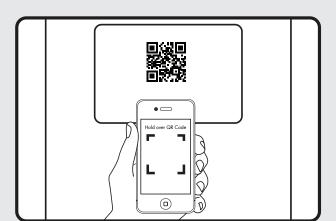


Charging as a Blink Guest

From the touchscreen, select to charge as a guest. When prompted, scan the QR code on the touchscreen with your smart phone to receive your Blink Guest Code.

Charging

Plugging in

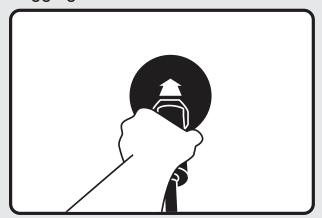

Charge

The screen will let you know when you are authorized to charge. Remove the connector from the charger and plug into your vehicle inlet. Follow the onscreen instruction to begin charging.





Finishing up

Push the lock release button and remove the connector from your vehicle. The cost summary for your charge session will display the duration of your charge session, and the amount you are being billed.

Help & Support

Receive help anytime





From the Touchscreen

The help section is accessed by pressing "Help" on the lower left corner of every screen.

In case of an emergency, access the electrical panel for the Blink charger and manually flip the charger's breaker switch to the OFF position.



Customer Support

If at any time you require further assistance, please contact the Blink Support Center.



support@blinknetwork.com



888 998 2546 (BLINK)